



Users of this attachment do so at their own risk. The manufacturers and suppliers will not take responsibility for personal injury or property damage resulting from inappropriate use, or incorrect use of this attachment. Tampering with this attachment, or modifying this attachment voids all claims on the supplier and manufacturer.

## 1. Assembly - Housing onto trimmer shaft

Bent shaft trimmer



Straight shaft trimmer


Attach the central housing to the shaft of your line trimmer using the wingnut clamps. You will need to completely undo the clamps to get them onto the shaft.

Note the sharp tail of the housing is pointing upwards towards the operator.

## 2. Fit arms.

There is a right-hand arm, and a left-hand arm. Look for the 2Terry's logo, its on the L.H. arm. Insert bolts through the holes and tighten the nuts securely.

On straight shaft trimmers the arms sweep forward and down.

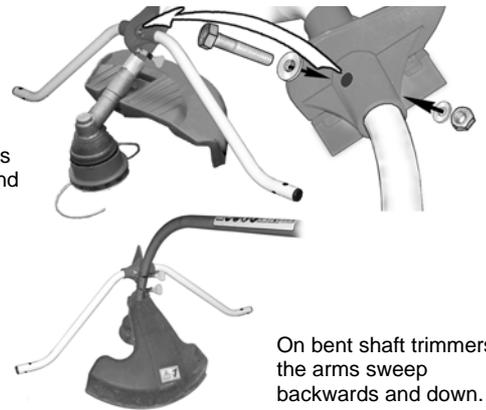

On bent shaft trimmers the arms sweep backwards and down.

## 3. Add the castor wheels

NYLOC NUT  
WASHER  
COLLAR



To enable the steering action to work effectively the castor rod needs to be vertical. Use the outer holes for a straight shaft trimmer, and the inner holes for a bent shaft trimmer

Screw the nut down far enough to take up any excessive looseness, but do not restrict free steering movement of the castor.

## 4. Using SUPERWHEELS®

Adjust the cutting height of your SUPERWHEELS by loosening the wingnut clamps and sliding the unit up/down the shaft - then re-tighten the clamps.

Use SUPERWHEELS as an edge trimmer, or a lawn mower.

Lawn mowing is best achieved with a side to side sweeping action while walking slowly forward.

With straight shaft trimmers you can also angle the cutting head for more convenient working along driveway or path edging).



NOTE:- start with a position shown above, then adjust to suit your preference

[www.the2terrys.com](http://www.the2terrys.com).  
- See other great innovative products -

### Warranty

This product is covered by warranty providing the nature of the claim is the result of faulty workmanship. Misuse or abuse voids all warranty. Warranty claims must be reported to the Selling Agent from whom it was originally purchased. The warranty is valid for a period of ninety days starting from the purchase date. The warranty will be void if any unauthorised persons tamper with the product or parts.